LifeFitness

ARCTIC SILVER CROSS TRAINER 93X-0XXX-02

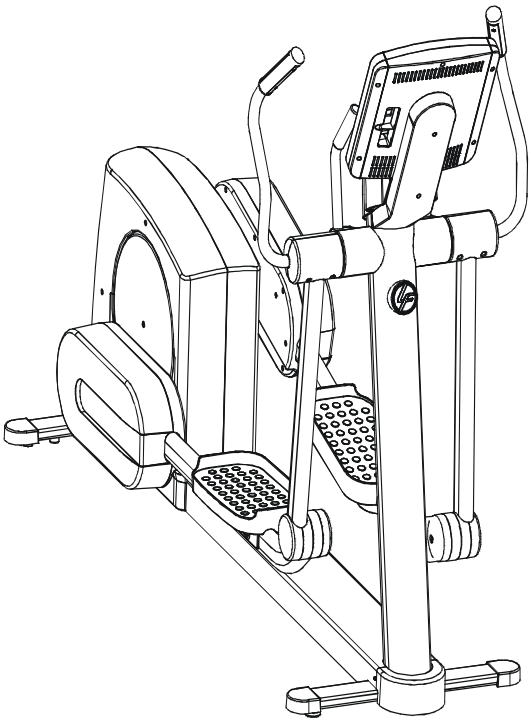

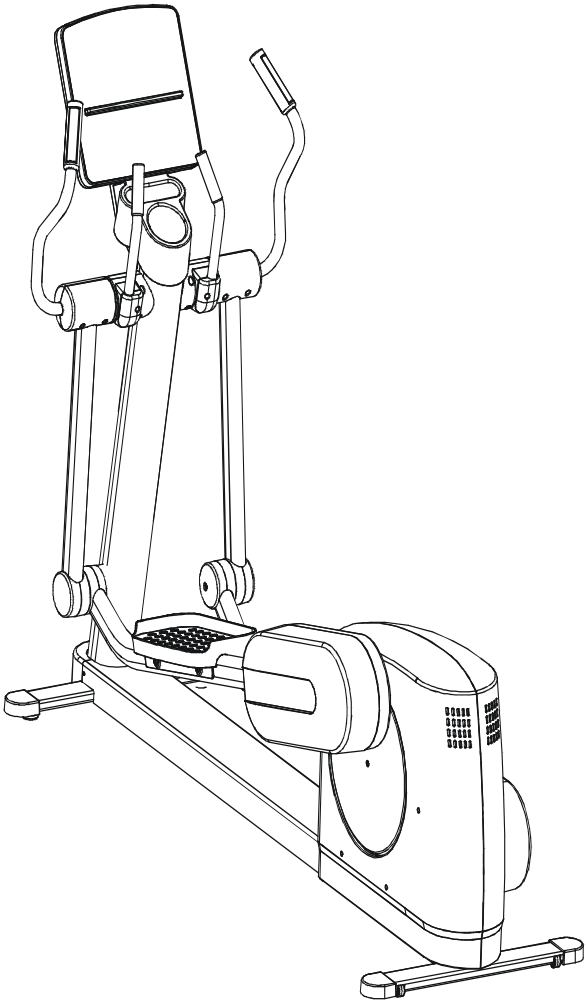

Customer Support Services

PARTS MANUAL rev 30 Jul 2008

OPERATION MANUAL	M051-00K62-A026
SERVICE MANUAL	M051-00K62-A060
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	 0017-00008-0204 0017-00008-0205 0017-00008-0206
CRANKSHAFT W/BEARINGS KIT	GK62-00002-0028
HARDWARE BAG	AK62-00152-0001
PLUG IN OPTION 120/60	GK60-00002-0018
PLUG IN OPTION 240/50 UK	GK60-00002-0019
PLUG IN OPTION 240v AUS	GK60-00002-0020
PLUG IN OPTION 230/50 CONT	GK60-00002-0021
C-SAFE KIT	GK63-00002-0003

UNLABELED PARTS	
DESCRIPTION	**PART NO.**
ROLLER: ANTI-LEFT B	0K62-01191-0000
PLATE: CRANKARM; PULLEY D	0K62-01203-0000
HANDLEBAR-ASSY: PAINT;BULLHRN;LT;PUR.S/C-C	AK62-00058-0000
MANUAL: OPER; 93X/90X; ENG +	M051-00K62-A111
CABLE-TIE: L=3-7/8'' S/C#09-B	0017-00042-0622
RNG:BRE 1.250 5100-125 ST PP B	0017-00100-0178
KEY: MACHINE; SQ; .250 B	0K53-01122-0000
PANEL: SHROUD; STEALTH S/C-D	0K62-01002-0003

Page

CONSOLE SUPPORT & DEADSHAFT COVERS 4

HANDLEBARS AND BULLHORNS 5

CONSOLE AND RELATED COMPONENTS 6

UPPER FRAME HARDWARE 7

ROCKER ARMS AND PEDAL LEVERS 8

CRANK COVER AND LOWER CAPS 9

LOWER FRAME SHROUDS AND HARDWARE 10

PEDAL LEVER COMPONENTS 11

DRIVE MODULE COMPONENTS 12

DRIVE MODULE HARDWARE 13

CABLES 14

Note: The 93X has Telemetry only.

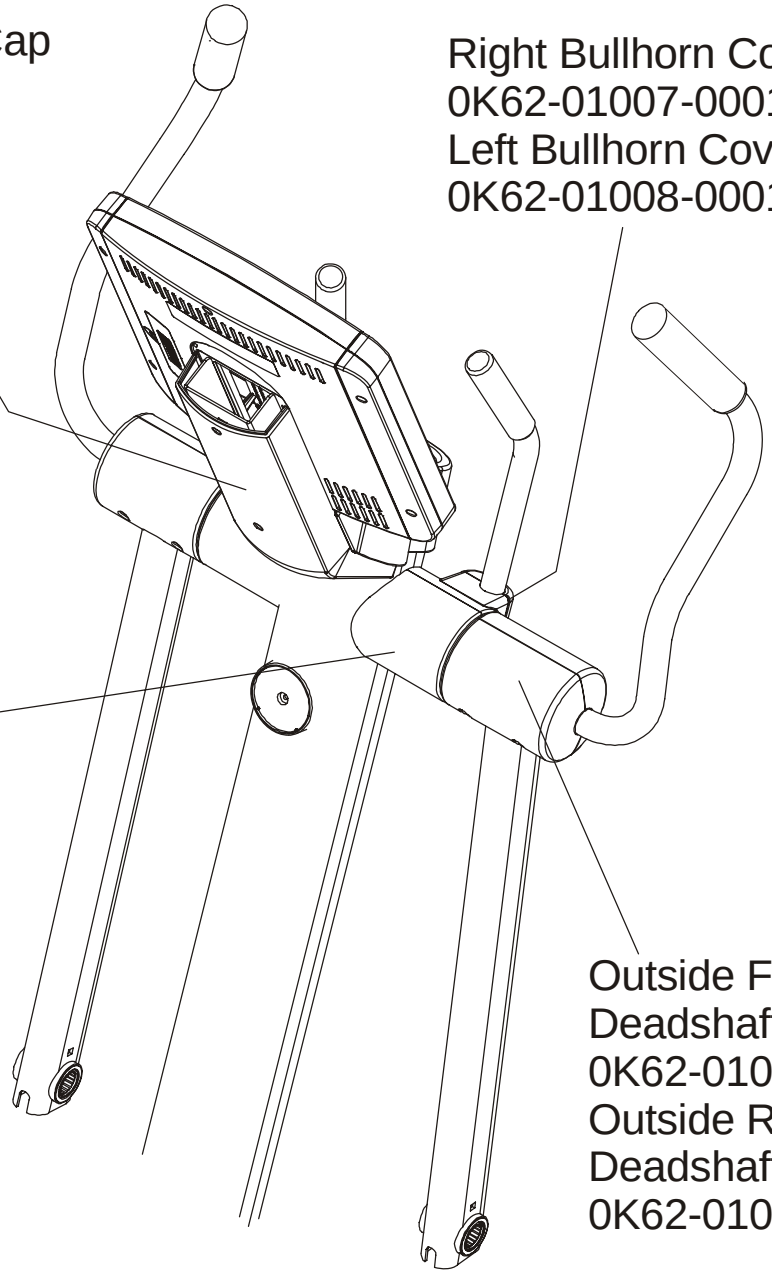

Console Support
AK62-00123-0000
Console Support Cap
0K62-01030-0000
Console Support
Shroud
0K62-01023-0000

Right Bullhorn Cover
0K62-01007-0001
Left Bullhorn Cover
0K62-01008-0001

Right Inside
Deadshaft Cover
0K62-01010-0000
Left Inside
Deadshaft Cover
0K62-01011-0000
2-Front Inside
Deadshaft Cover
0K62-01009-0000

Outside Front
Deadshaft Cover (2)
0K62-01013-0000
Outside Rear
Deadshaft Cover (2)
0K62-01012-0000

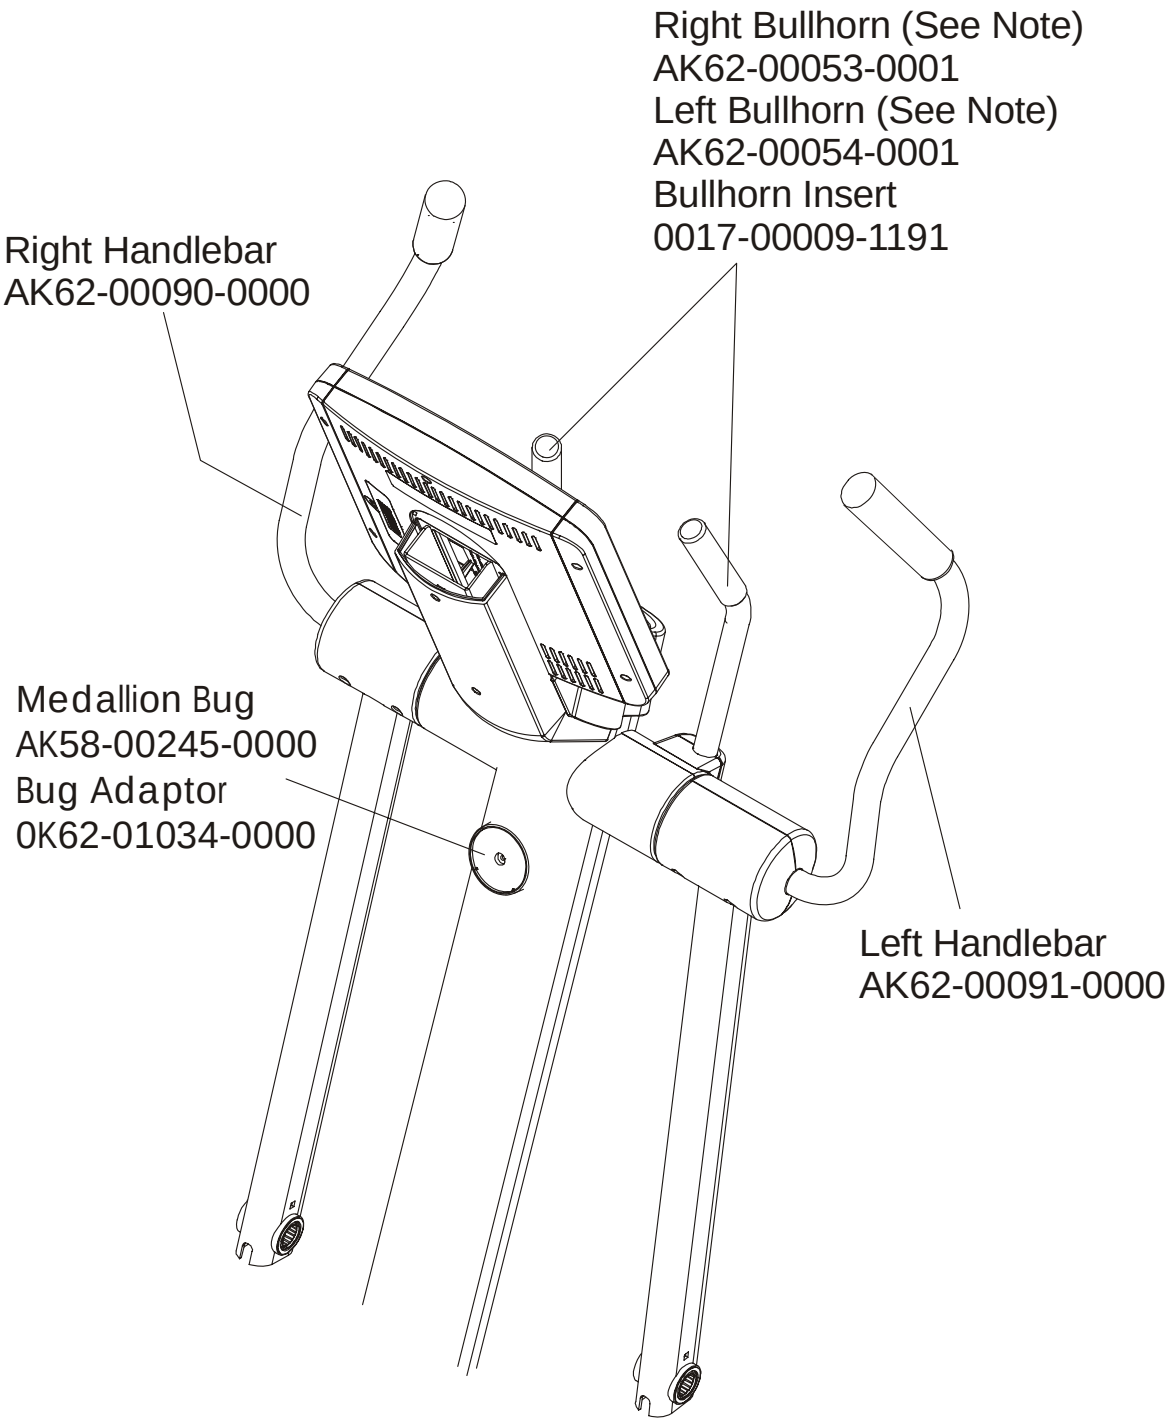

NOTE: The Right Bullhorn Assembly consists of: AK62-00057-0001 Bullhorn, 0K62-01136-0000 Grip, and 0K62-01199-0000 Gasket.

NOTE: The Left Bullhorn Assembly consists of: AK62-00058-0001 Bullhorn, 0K62-01136-0000 Grip and 0K62-01199-0000 Gasket

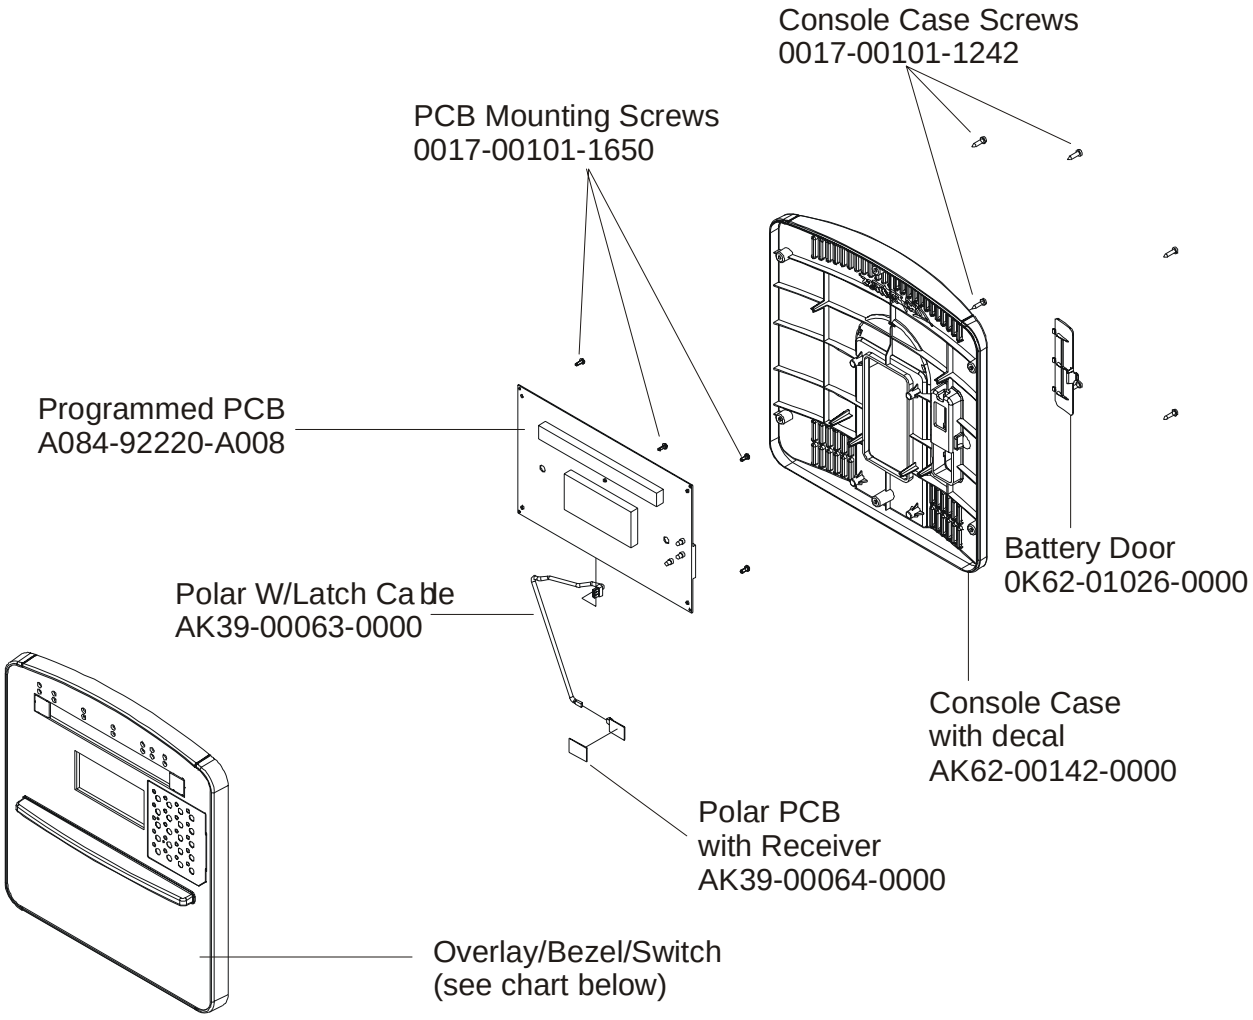

CONSOLE	OVERLAY/BEZEL/SWITCH	LANGUAGE
AK62-00150-0001	AK62-00190-0001	Eng + Met
AK62-00150-0003	AK62-00190-0003	Ger/Met
AK62-00150-0004	AK62-00190-0004	Spn/Met
AK62-00150-0006	AK62-00190-0006	Jap/Met
AK62-00150-0007	AK62-00190-0007	Frn/Met
AK62-00150-0008	AK62-00190-0008	Ital/Met
AK62-00150-0009	AK62-00190-0009	Dut/Met
AK62-00150-0010	AK62-00190-0010	Port/Met

Items Not Shown	
Accessory Tray	0K62-01022-0000
Accessory Tray Mounting Screws (2)	0017-00101-1846

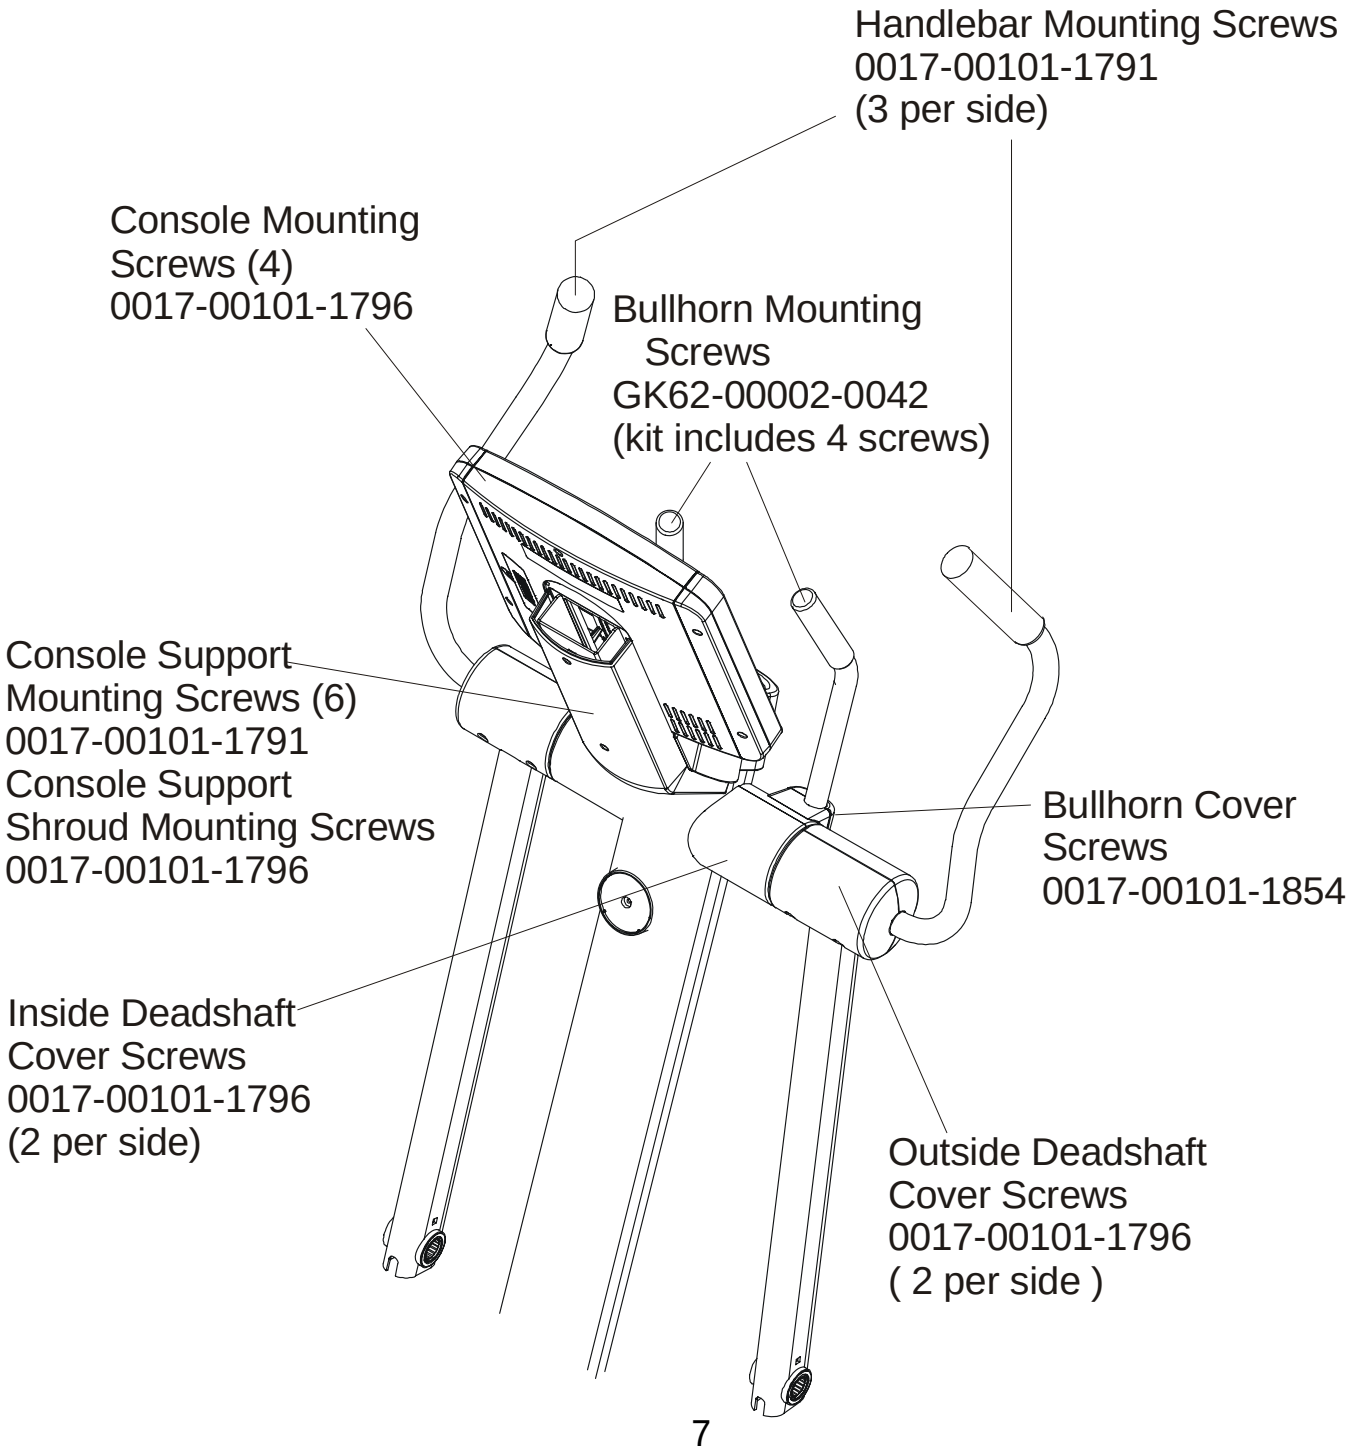

Rocker Arms Kit
GK62-00002-0070
contents:
- Rocker Arms (2)
- Hardened Spacers (2)
- Oilite Washers (2)
- Retaining Rings (2)
- *Loctite 620*
- Alcohol pad

Rocker Arms
AK62-00002-0070
Shaft Collar w/Screws
0K61-01259-0000

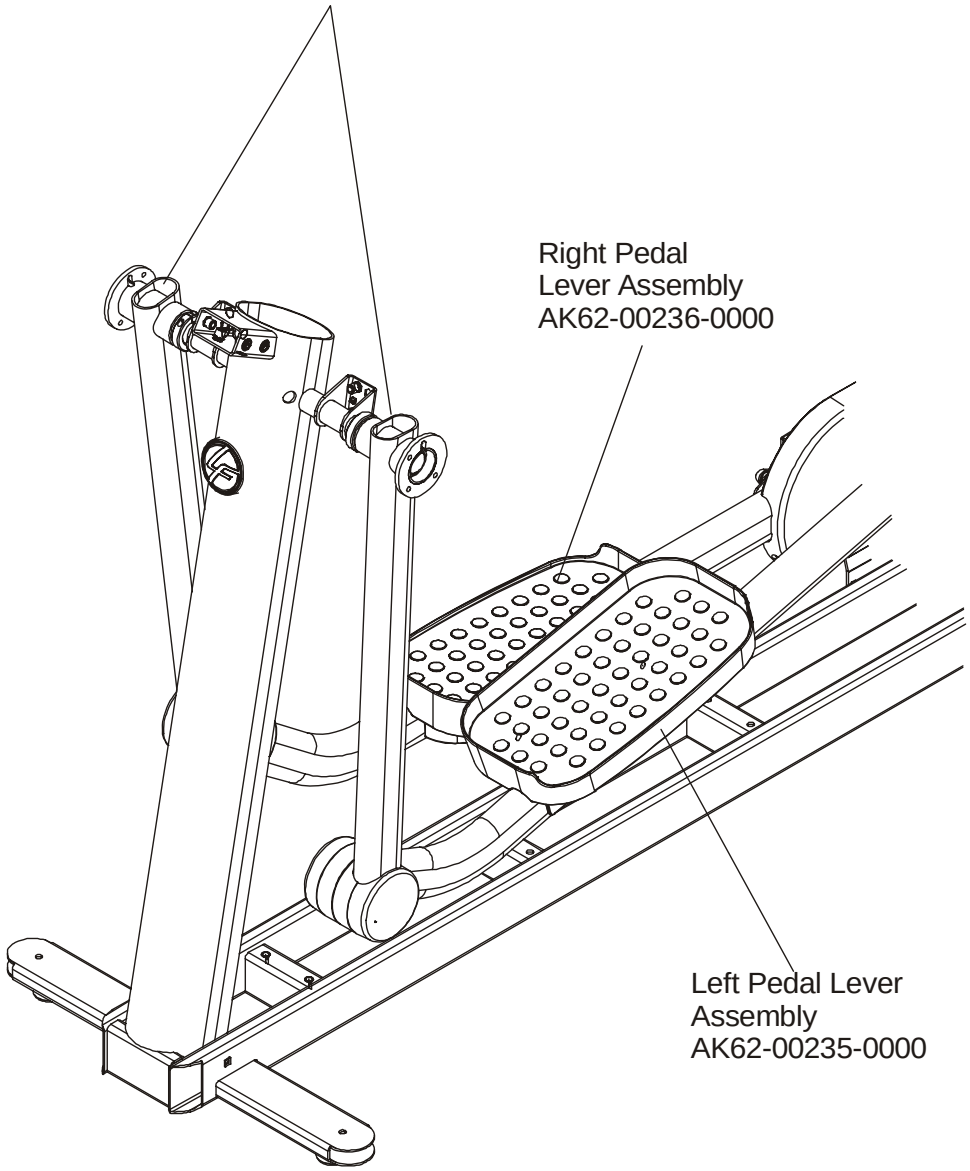

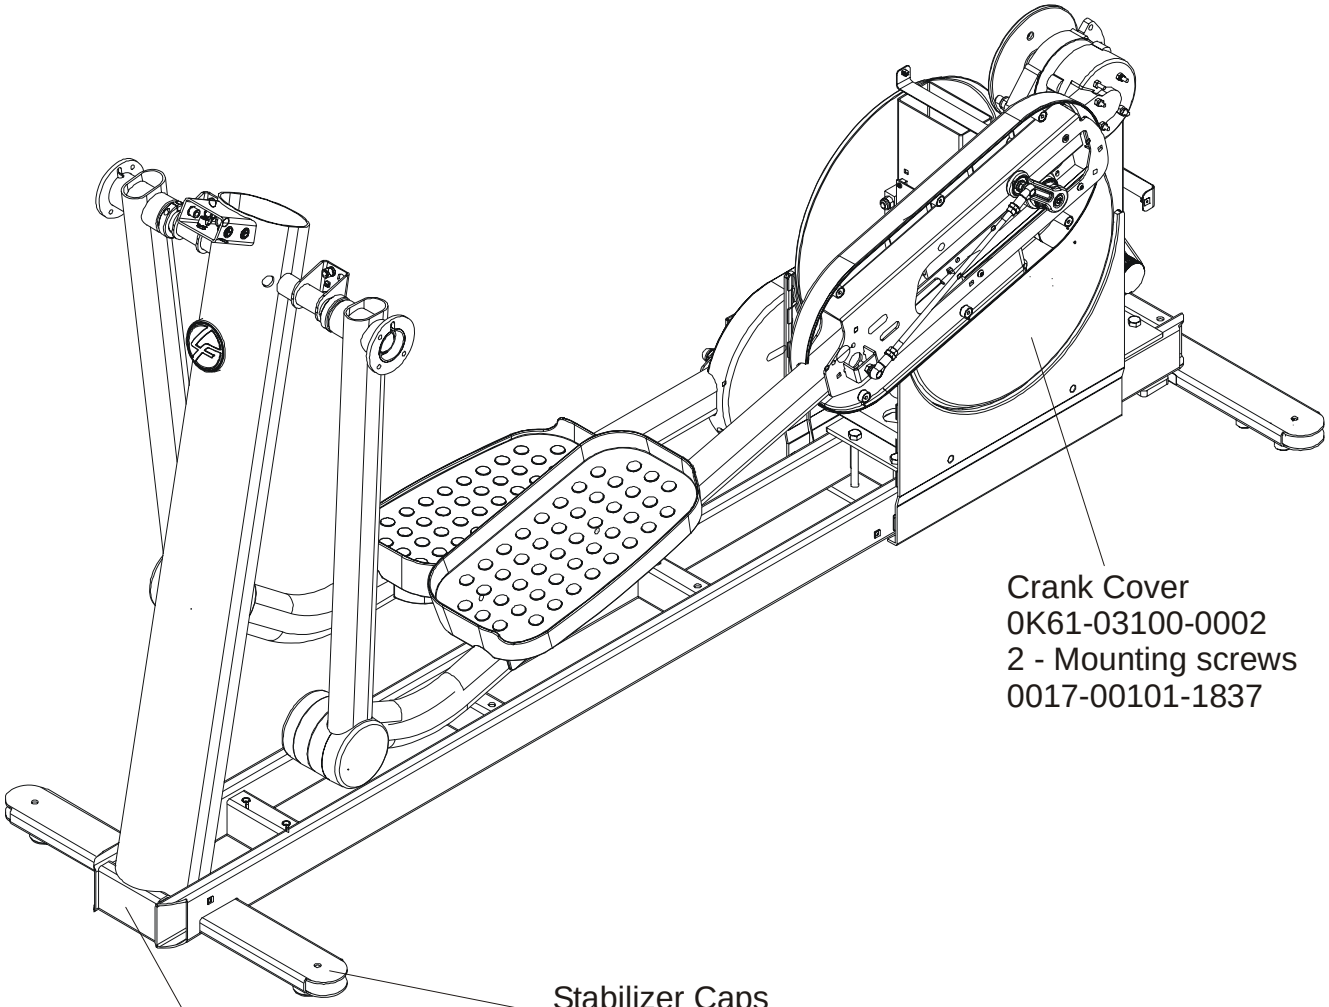
Crank Cover
0K61-03100-0002
2 - Mounting screws
0017-00101-1837
Stabilizer Caps
4 - 0K62-01003-0000
Front frame Cap
0K62-01004-0000
Mounting Screws
(Located on front sides of Ladder Frame Cover)
2- 0017-00101-1795

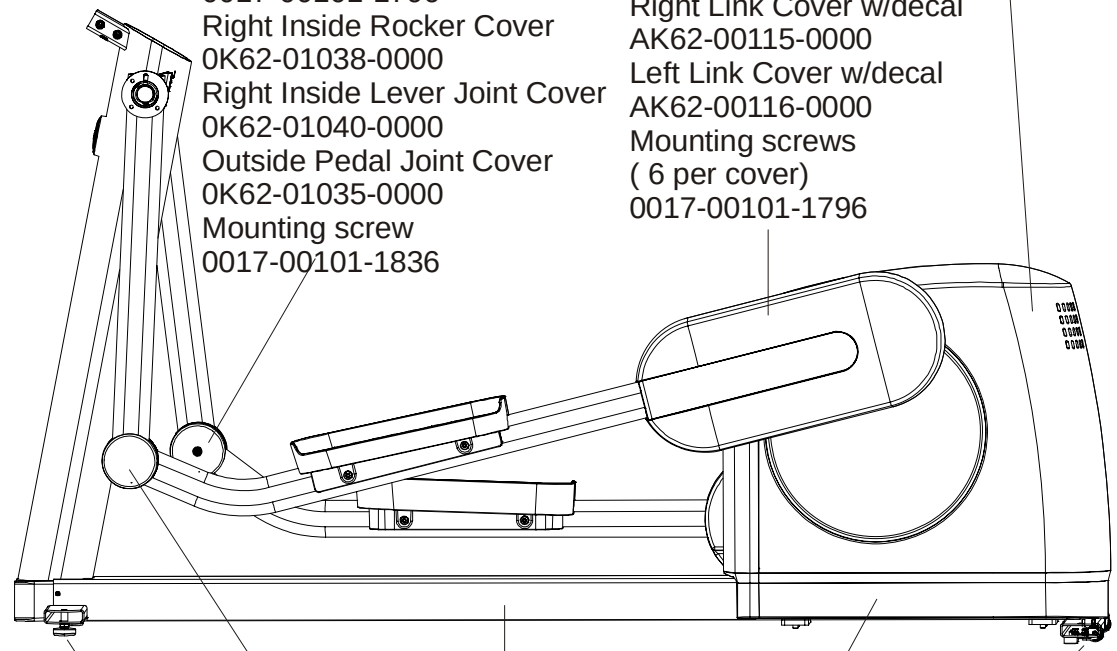

Rear Shroud Assy.
AK62-00223-0000
Mounting screws
(2 per side)
0017-00101-1796

Rocker Cover Kit
(includes clip & screw)
GK62-00002-0066
Mounting screw
0017-00101-1796
Right Inside Rocker Cover
0K62-01038-0000
Right Inside Lever Joint Cover
0K62-01040-0000
Outside Pedal Joint Cover
0K62-01035-0000
Mounting screw
0017-00101-1836

Right Link Cover w/decal
AK62-00115-0000
Left Link Cover w/decal
AK62-00116-0000
Mounting screws
(6 per cover)
0017-00101-1796

Leg Levelers
AK62-00124-0000

Ladder Frame Cover w/decal
AK62-00106-0001
4 - Mounting screws
0017-00101-1795

Wheel/Bracket Assy.
AK62-00102-0000
Mounting Screws
(3 per assy.)
0017-00101-1789

Rocker Cover Kit
(includes clip & screw)
GK62-00002-0066
Mounting screw
0017-00101-1796
Left Inside Rocker Cover
0K62-01037-0000
Left Inside Lever Joint Cover
0K62-01039-0000
Outside Pedal Joint Cover
0K62-01035-0000
Mounting Screw
0017-00101-1836

Shroud Panel
0K62-01002-0003
Mounting screws
(2 per side)
0017-00101-1795

Pedal Lever Assembly Components S/N ACH100000 and up

Control Link Kit
GK62-00002-0071
(contains 2 control links,
part nos. AK62-00384-0000)

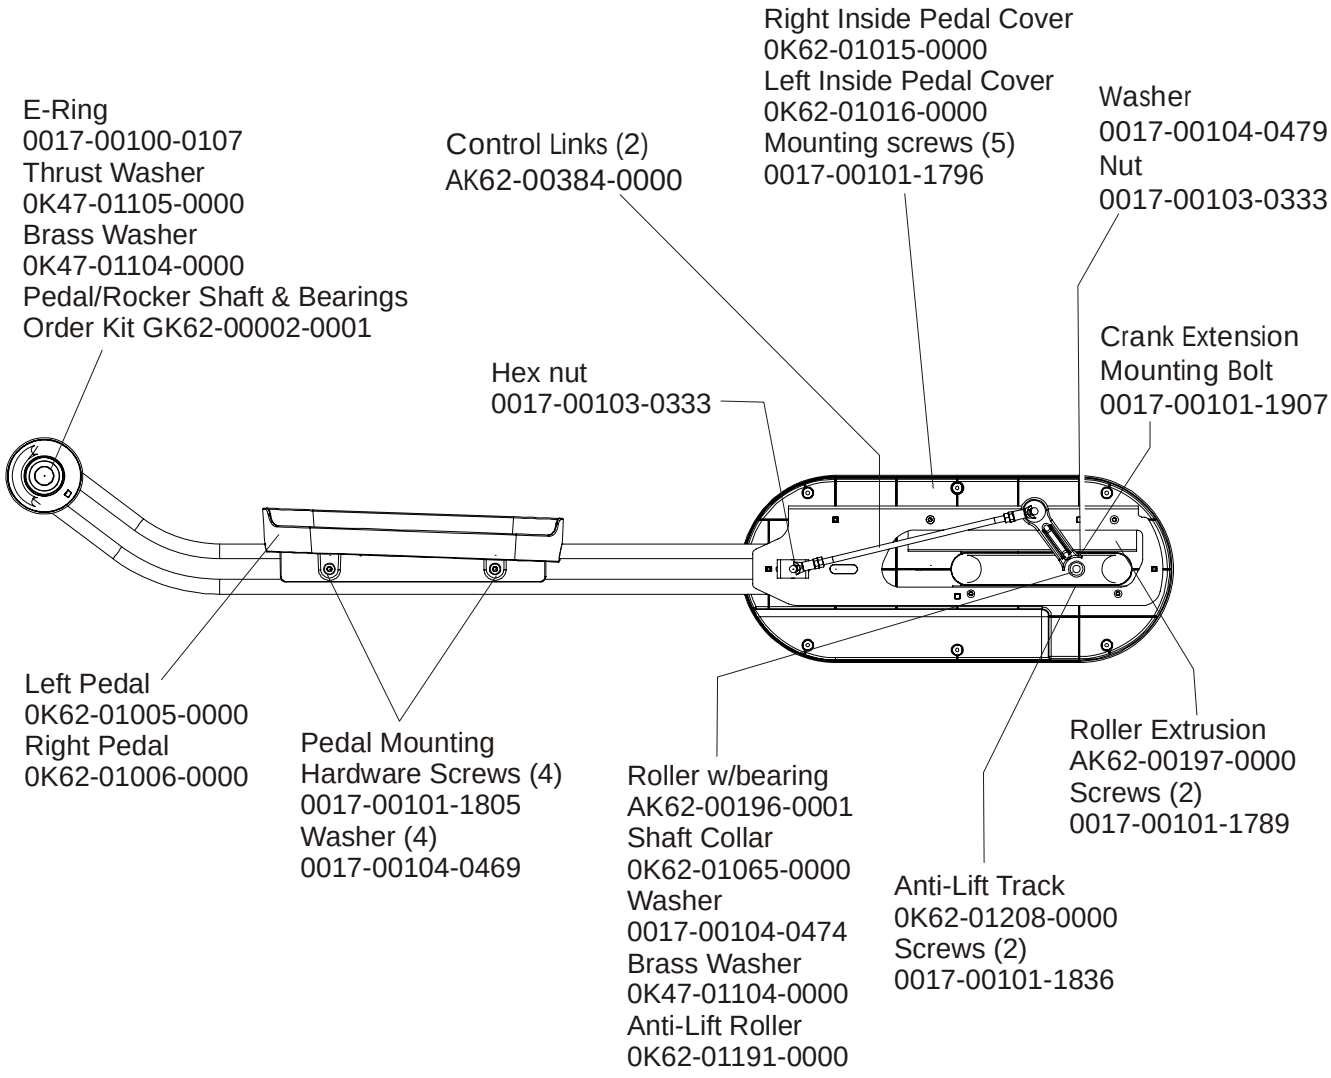

Note: If replacing the Tie Rod Assembly or Crank Extension for the first time, order kit GK62-00002-0015. Both sides must be replaced simultaneously in this situation.

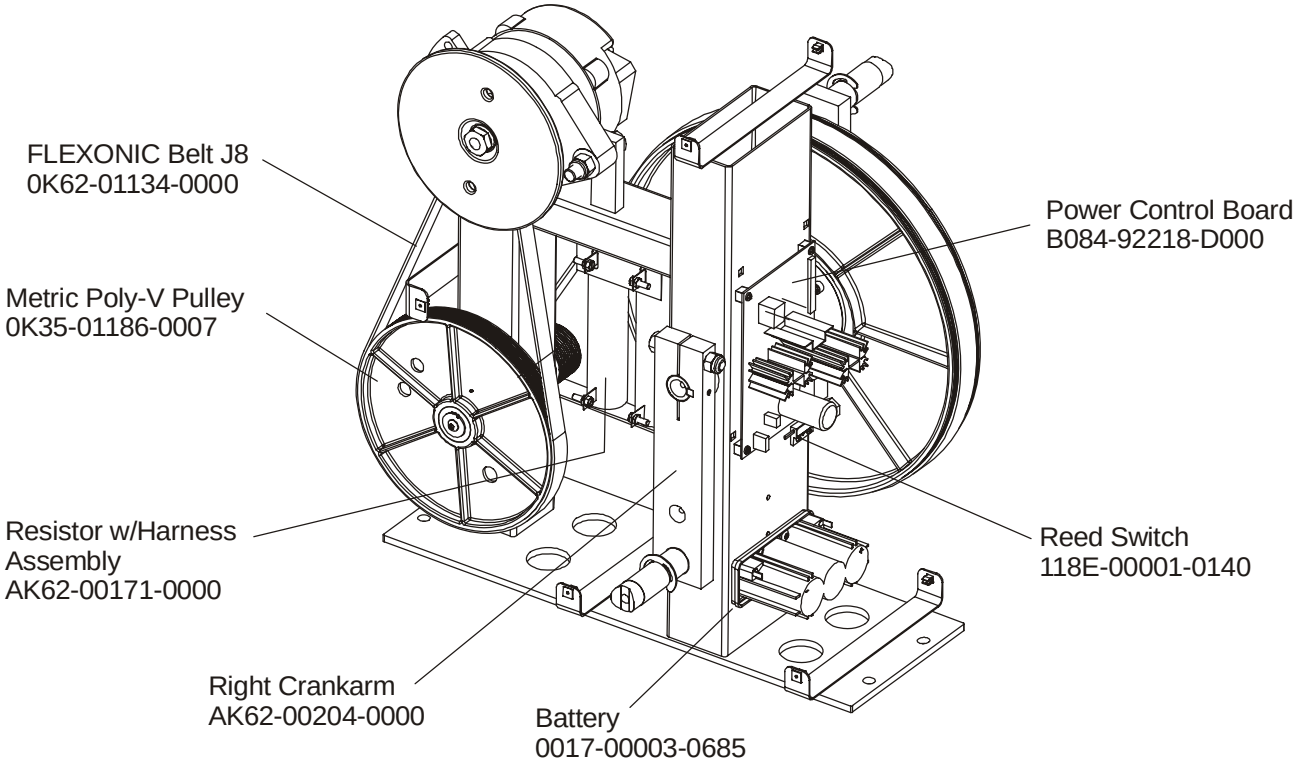
FLEXONIC Belt J8
0K62-01134-0000
Metric Poly-V Pulley
0K35-01186-0007
Resistor w/Harness
Assembly
AK62-00171-0000
Right Crankarm
AK62-00204-0000
Battery
0017-00003-0685
Reed Switch
118E-00001-0140
Power Control Board
B084-92218-D000

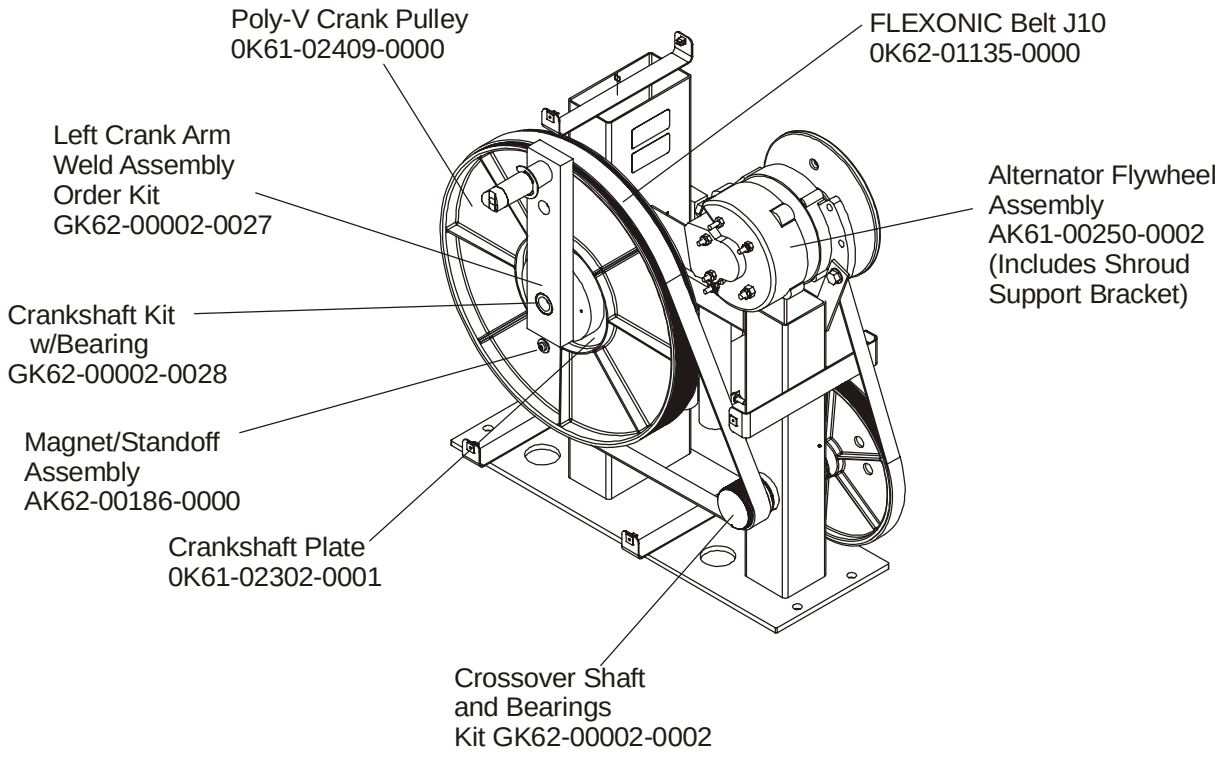
Poly-V Crank Pulley
0K61-02409-0000
Left Crank Arm
Weld Assembly
Order Kit
GK62-00002-0027
Crankshaft Kit
w/Bearing
GK62-00002-0028
Magnet/Standoff
Assembly
AK62-00186-0000
Crankshaft Plate
0K61-02302-0001
Crossover Shaft
and Bearings
Kit GK62-00002-0002
FLEXONIC Belt J10
0K62-01135-0000
Alternator Flywheel
Assembly
AK61-00250-0002
(Includes Shroud
Support Bracket)

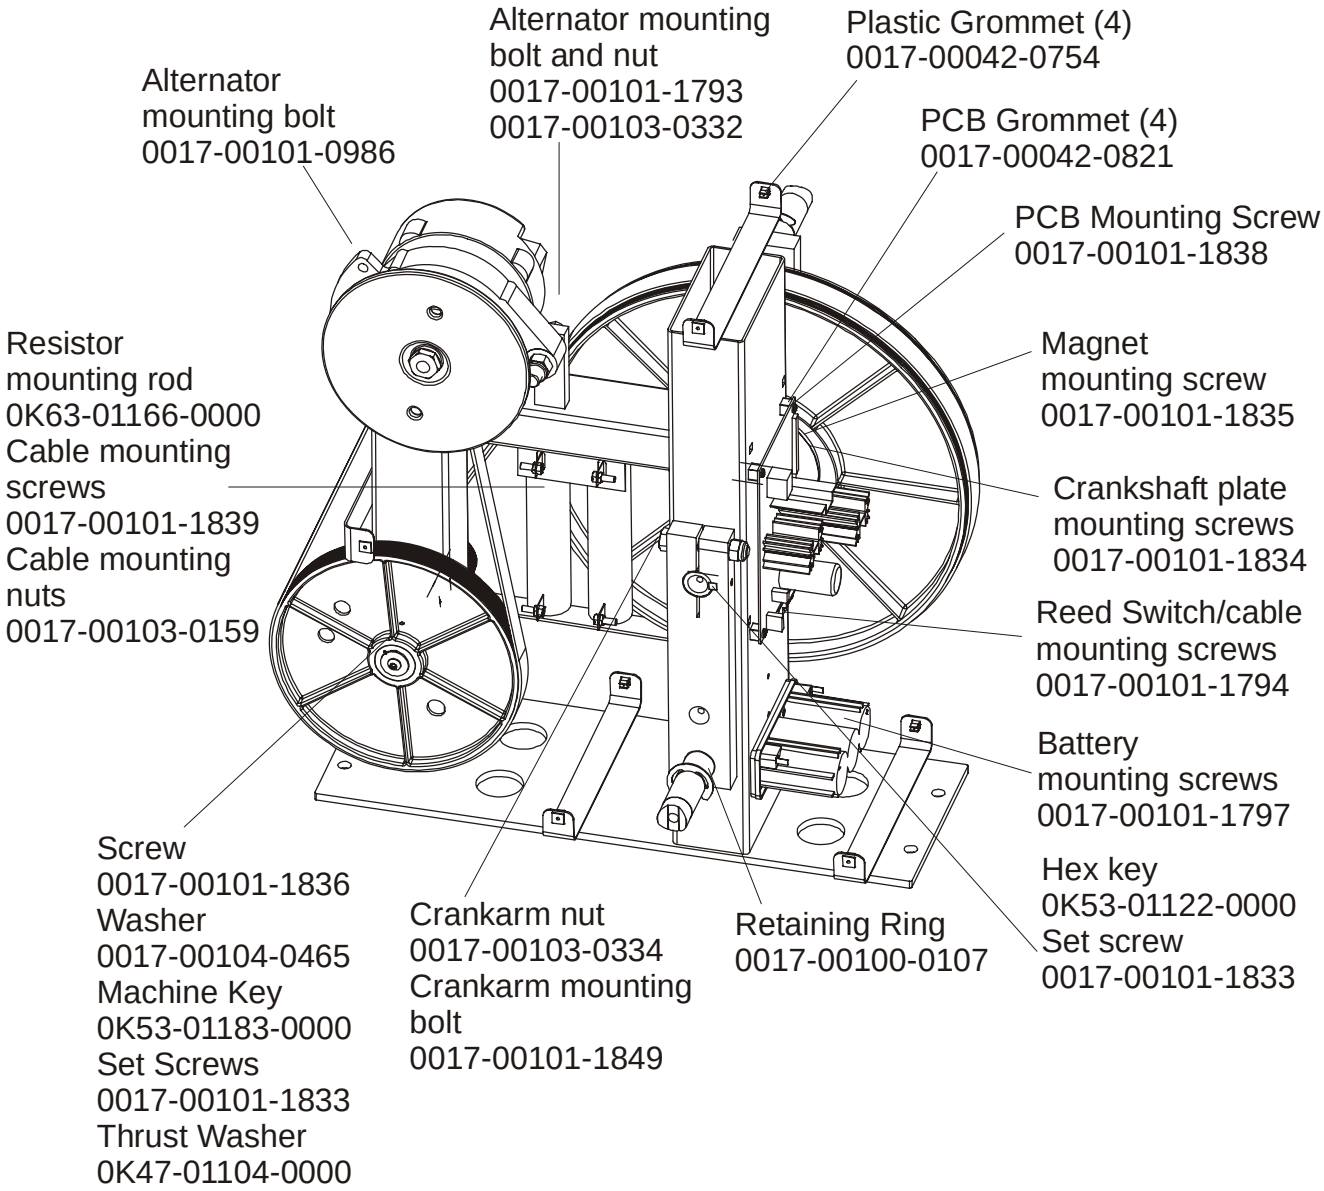
Alternator mounting bolt and nut
0017-00101-1793
0017-00103-0332
Plastic Grommet (4)
0017-00042-0754
Alternator mounting bolt
0017-00101-0986
PCB Grommet (4)
0017-00042-0821
PCB Mounting Screw
0017-00101-1838
Resistor mounting rod
0K63-01166-0000
Cable mounting screws
0017-00101-1839
Cable mounting nuts
0017-00103-0159
Magnet mounting screw
0017-00101-1835
Crankshaft plate mounting screws
0017-00101-1834
Reed Switch/cable mounting screws
0017-00101-1794
Battery mounting screws
0017-00101-1797
Hex key
0K53-01122-0000
Set screw
0017-00101-1833
Screw
0017-00101-1836
Washer
0017-00104-0465
Machine Key
0K53-01183-0000
Set Screws
0017-00101-1833
Thrust Washer
0K47-01104-0000
Crankarm nut
0017-00103-0334
Crankarm mounting bolt
0017-00101-1849
Retaining Ring
0017-00100-0107

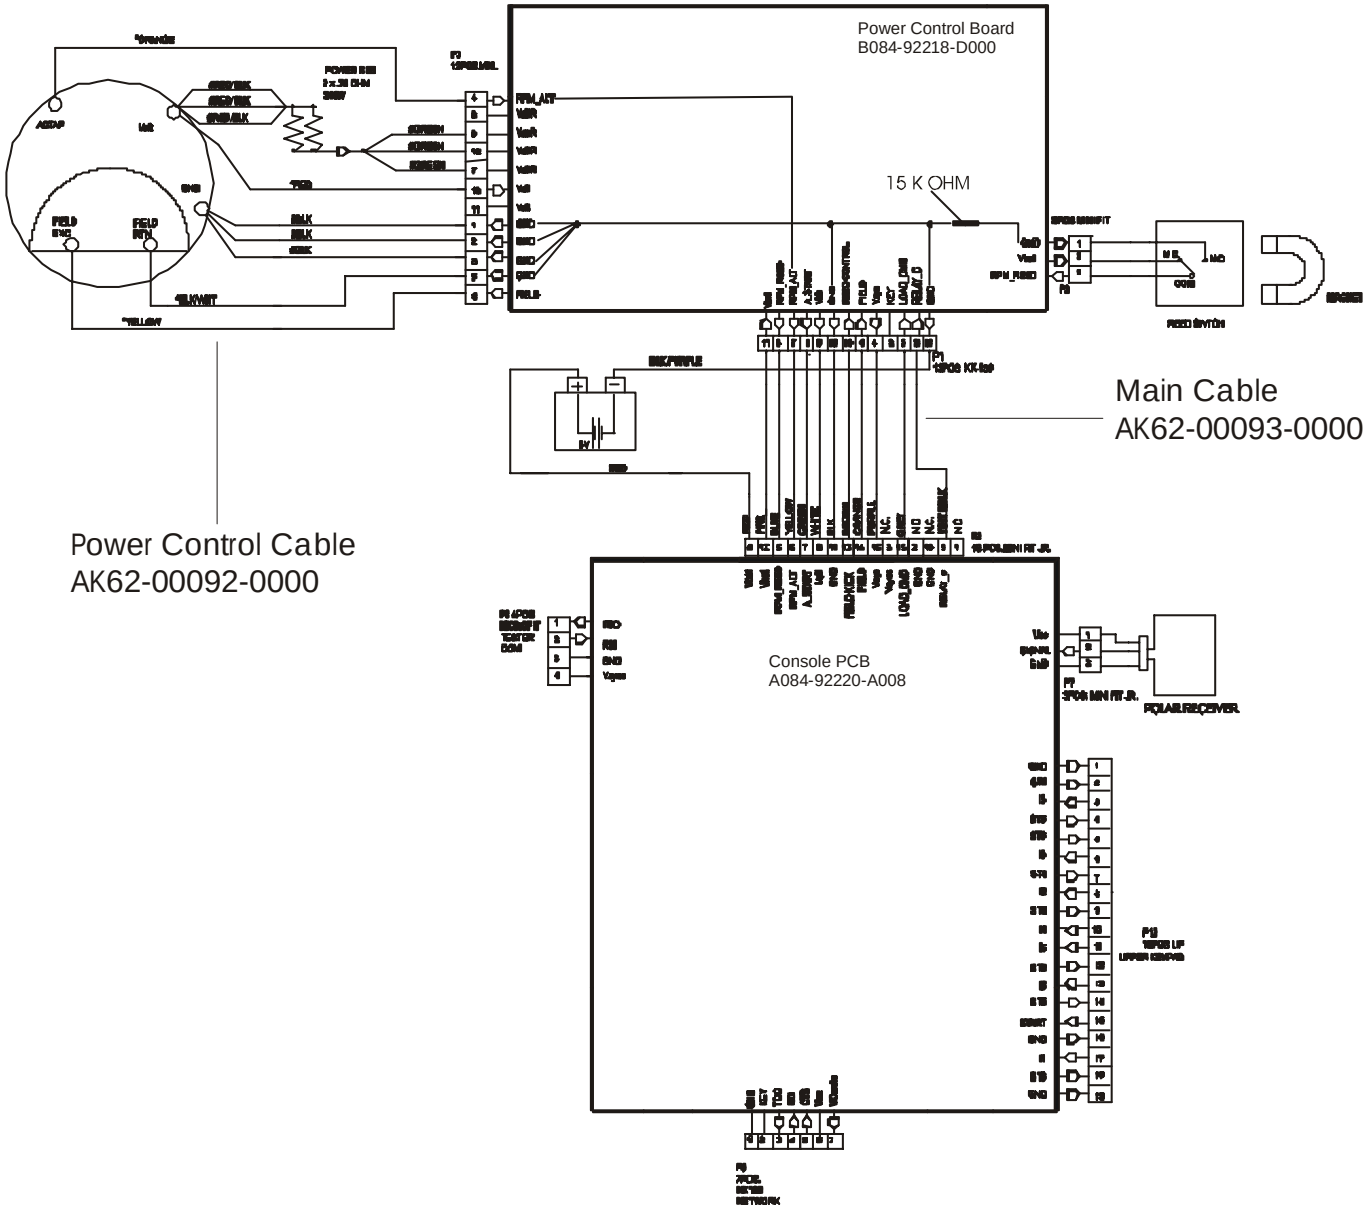
Power Control Board
B084-92218-D000
15 K OHM
Main Cable
AK62-00093-0000
Power Control Cable
AK62-00092-0000
Console PCB
A084-92220-A008